


Valve position Indication

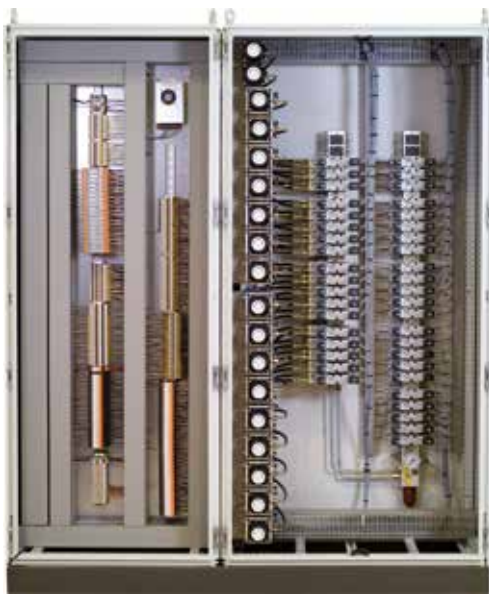

INDIRECT OPEN/CLOSE INDICATION FLOW SWITCH INDICATOR INSTALLED IN SOLENOID VALVE CABINET

Open/Close indication based on monitoring the flow in the lines to the actuator. Positive feedback on actuator movement by indication of flow in return line. No additional cabling to actuator needed.

See datasheet Control Circuit D22 and S22 for details.

